

Instructions for Installing the Honda, VT-600, VLX 600, Forward Control Relocation Kit



Forward Control Relocation Kit and Parts included w/kit (right & left sides)

Install the Brake Side.

1. Remove the brake rod clip retainer from the brake pedal lower unit.
2. Use a 14mm open end wrench or socket wrench and remove the 2 bolts from the right side peg mounting bracket to remove the bracket from the motorcycle.
3. Using the 2 bolts and washers provided, install the right side control relocation kit on the motorcycle and tighten the 2 bolts (see fig. 1).

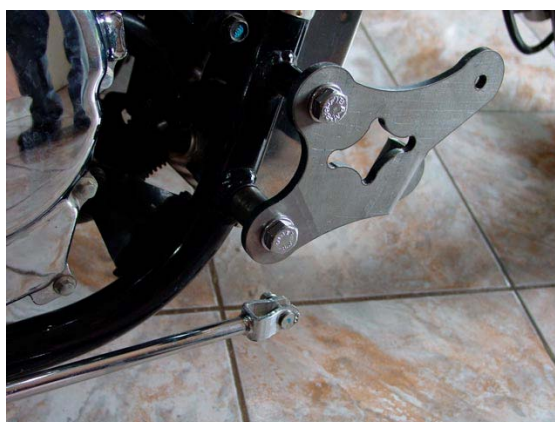


Fig 1

4. Insert the flat brake rod extender provided with the kit with the flat side (See fig.2) inserted into the motorcycle's existing brake rod. The small forked end slips around the round brake rod protruding from your existing brake rod. Install the mounting hardware and tighten securely.



(Fig. 2)

5. Insert the other end of the brake rod extender into your brake pedal lower unit (see fig. 3), install and tighten the fasteners. Insert your peg mounting bolts into the forward control and tighten.



Fig 3

6. The completed right side assembly should look like the assembled unit in (Fig 4) below.



Fig 4

7. Test your brake operation, including the brake light. You may need to adjust your brake linkage for proper operation. Refer to your service manual for brake linkage adjustment.

Install the Shifter Side

8. Using a 14mm open end wrench or socket wrench, remove the 2 bolts holding the left side peg mounting bracket to the motorcycle.
9. Unscrew the shifter linkage rod from the shifter.

10. Install the shifter side relocation kit bracket to the motorcycle using the supplied bolts and washers. (See fig.5)



Fig 5

11. Install the round shifter linkage extension onto the original shifter rod.
12. Attach the shifter pedal to the shifter rod extension. See (Fig.6).



Fig 6

13. Install the left side peg mounting bracket onto the relocation kit bracket as indicated in Fig 7.



Fig 7

14. Install the small spacer between the pedal and the relocation kit bracket See Fig 8 below. Then mount the pedal to the kit bracket.



Fig 8

15. The peg/pedal is now mounted to your forward control extension bracket. See fig 9 below.



Fig 9

16. Adjust the shifter linkage as required. Consult your service manual for linkage adjustment